


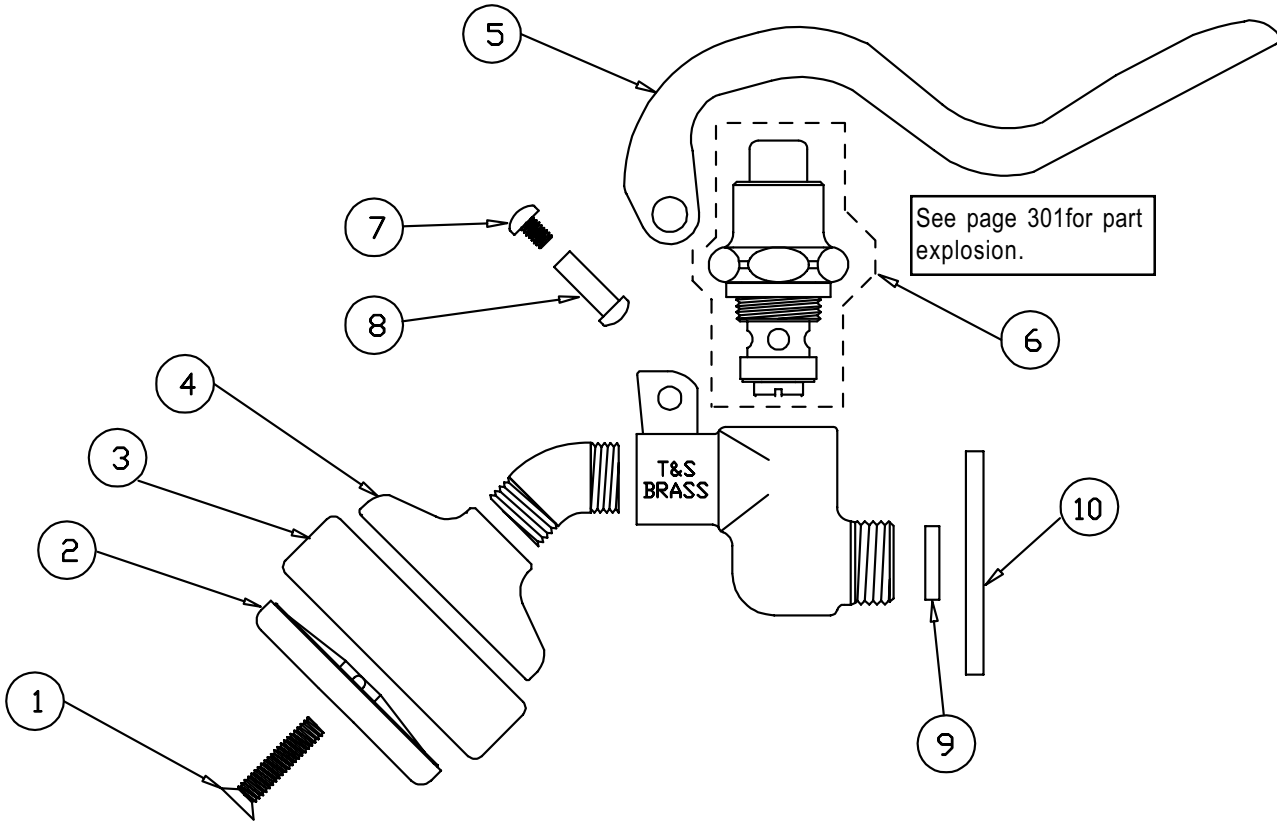

B-0107-035



Spray Valve Assembly

1	Screw, Spray Face	000913-45
2	Spray Face	001121-45
3	Ring, Rubber	001861-45
4	Spray, Cup	000019-40
5	Handle, Squeeze Valve	001120-45
6	Asm, Bonnet	002856-40
7	Screw, Handle	003199-45
8	Nut, Handle	003198-45
9	Washer	010476-45
10	Ring, Hold Down	000907-45

