


B-0133, B-0133-B, B-0133-C

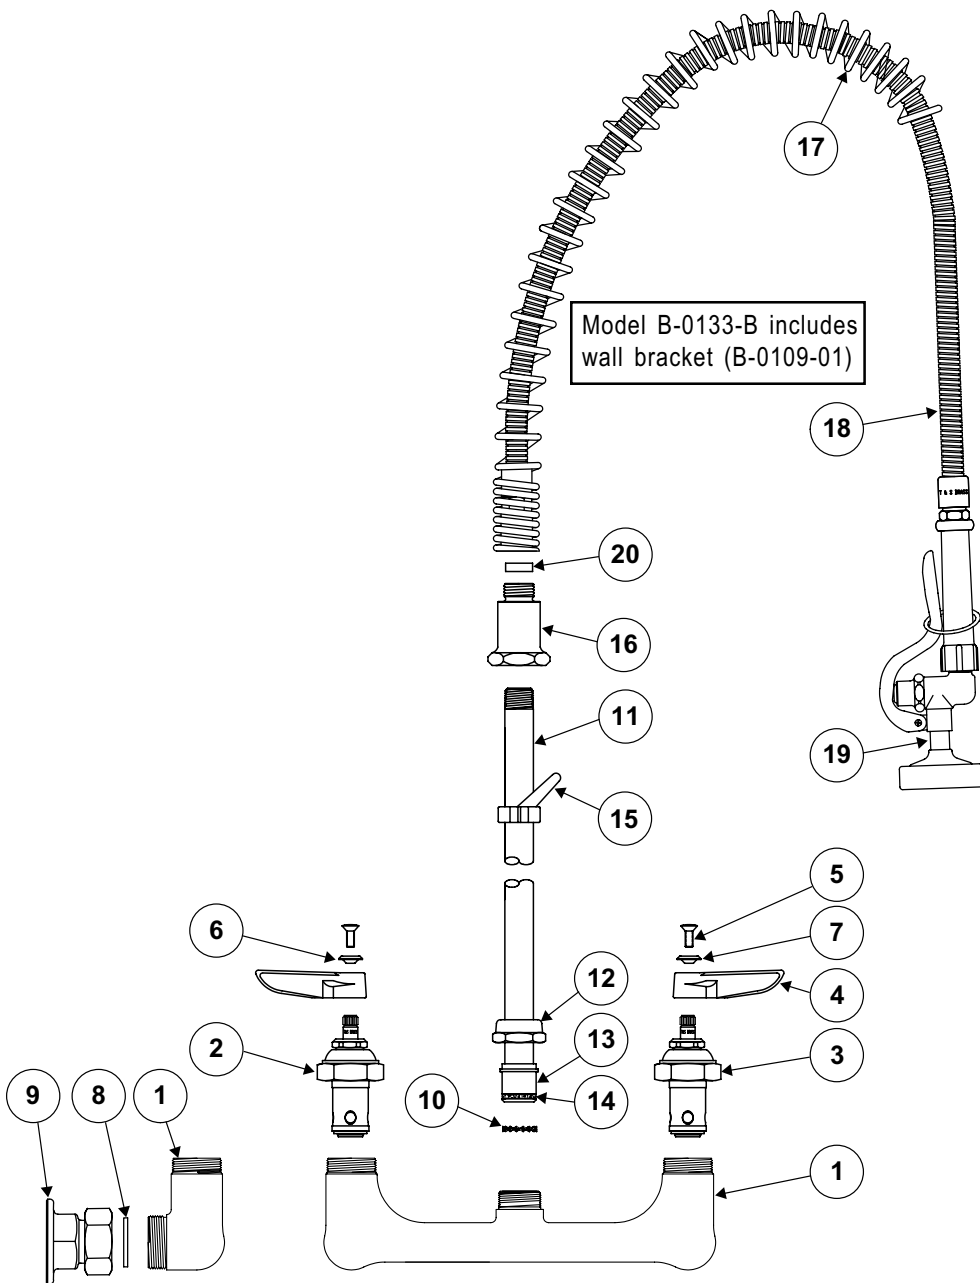

Model B-0133-C includes spray valve (B-0107-C). See page 13 for part explosion

Model B-0133 and Model B-0133-B include spray valve (B-0107). See page 11 for part explosion

Body Faucet Assembly

1	Faucet Body	*	
2	Asm, Spindle - Hot	005960-40	
3	Asm, Spindle - Cold	005959-40	
4	Handle, Lever - Blank	001638-45	
5	Screw, Handle	000922-45	
6	Index, Button - Hot (Red)	001661-45	
7	Index, Button - Cold (Blue)	001660-45	
8	Washer	*	
9	Asm, Coupling Flange	002893-40	
10	Lock Washer, EZ-Install	*	
11	Nipple, 3/8" x 18"	000369-40	
12	Swivel Nut	*	
13	Swivel Piece	*	
14	O-Ring, Swivel Piece	001074-45	
15	Asm, Finger Hook & Screw	002873-40	
16	Spring, Body	000821-40	
17	Spring, Overhead	*	
18	Asm, Flex Stainless Steel Hose	B-0044-H	
19	Asm, Spray Valve	B-0107	
20	Washer	010476-45	

