



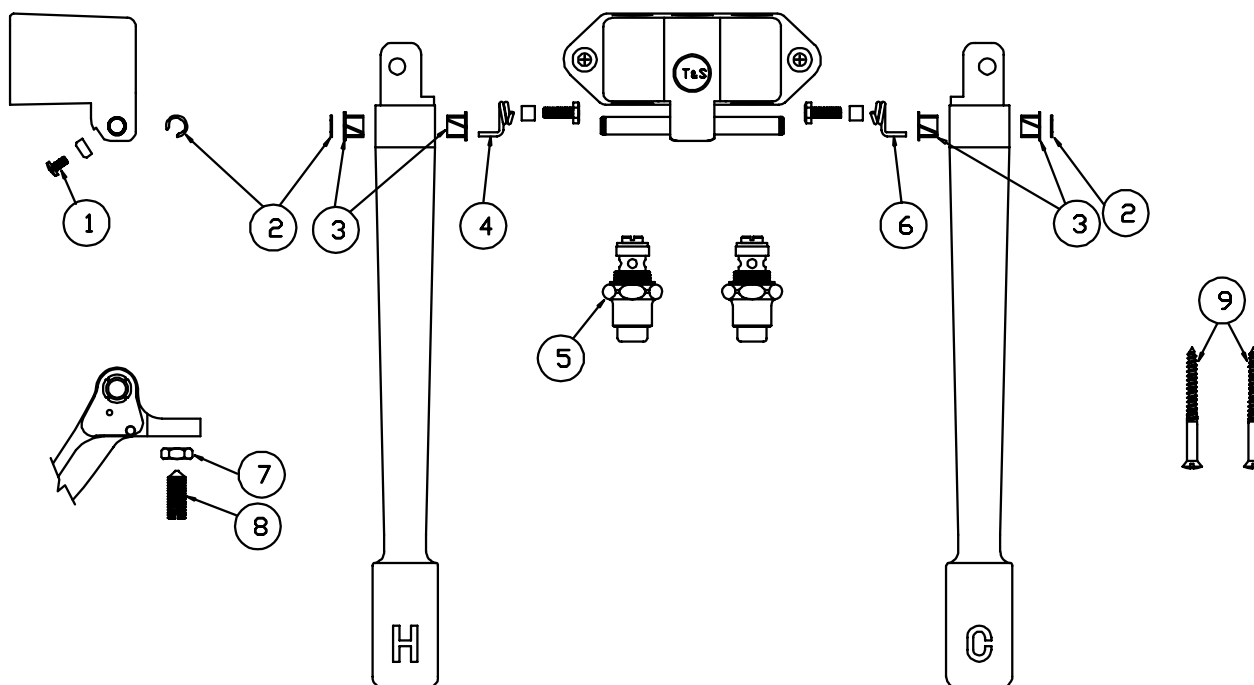

# B-0504, B-0504-LKS

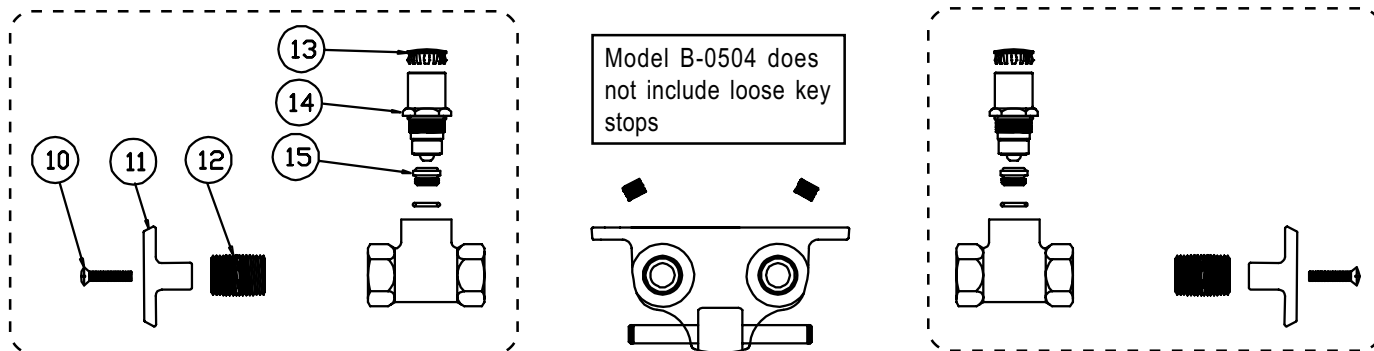

## Double Pedal Valve Assembly

1	Screw, Nylon Pad	012523-45	9	Screw, Wall Mounting	003749-45
2	Snap-Ring, Shaft	012512-45	10	Screw, Supply Stop, Handle	002432-45
3	Bushing	001602-45	11	T' Handle, Supply Stop	001802-45
4	Spring, LH Pedal Hot	000886-45	12	Nipple, Supply Stop	002534-25
5	Asm, Bonnet	005312-40	13	Cap, Key Stop	001605-45
6	Spring, RH Pedal Cold	000887-45	14	Asm, Spindle	166A
7	Nut, Adjustable Screw Lock	000952-45	15	Seat	000763-20
8	Set Screw, Adjustable	001123-45			

