


B-0676

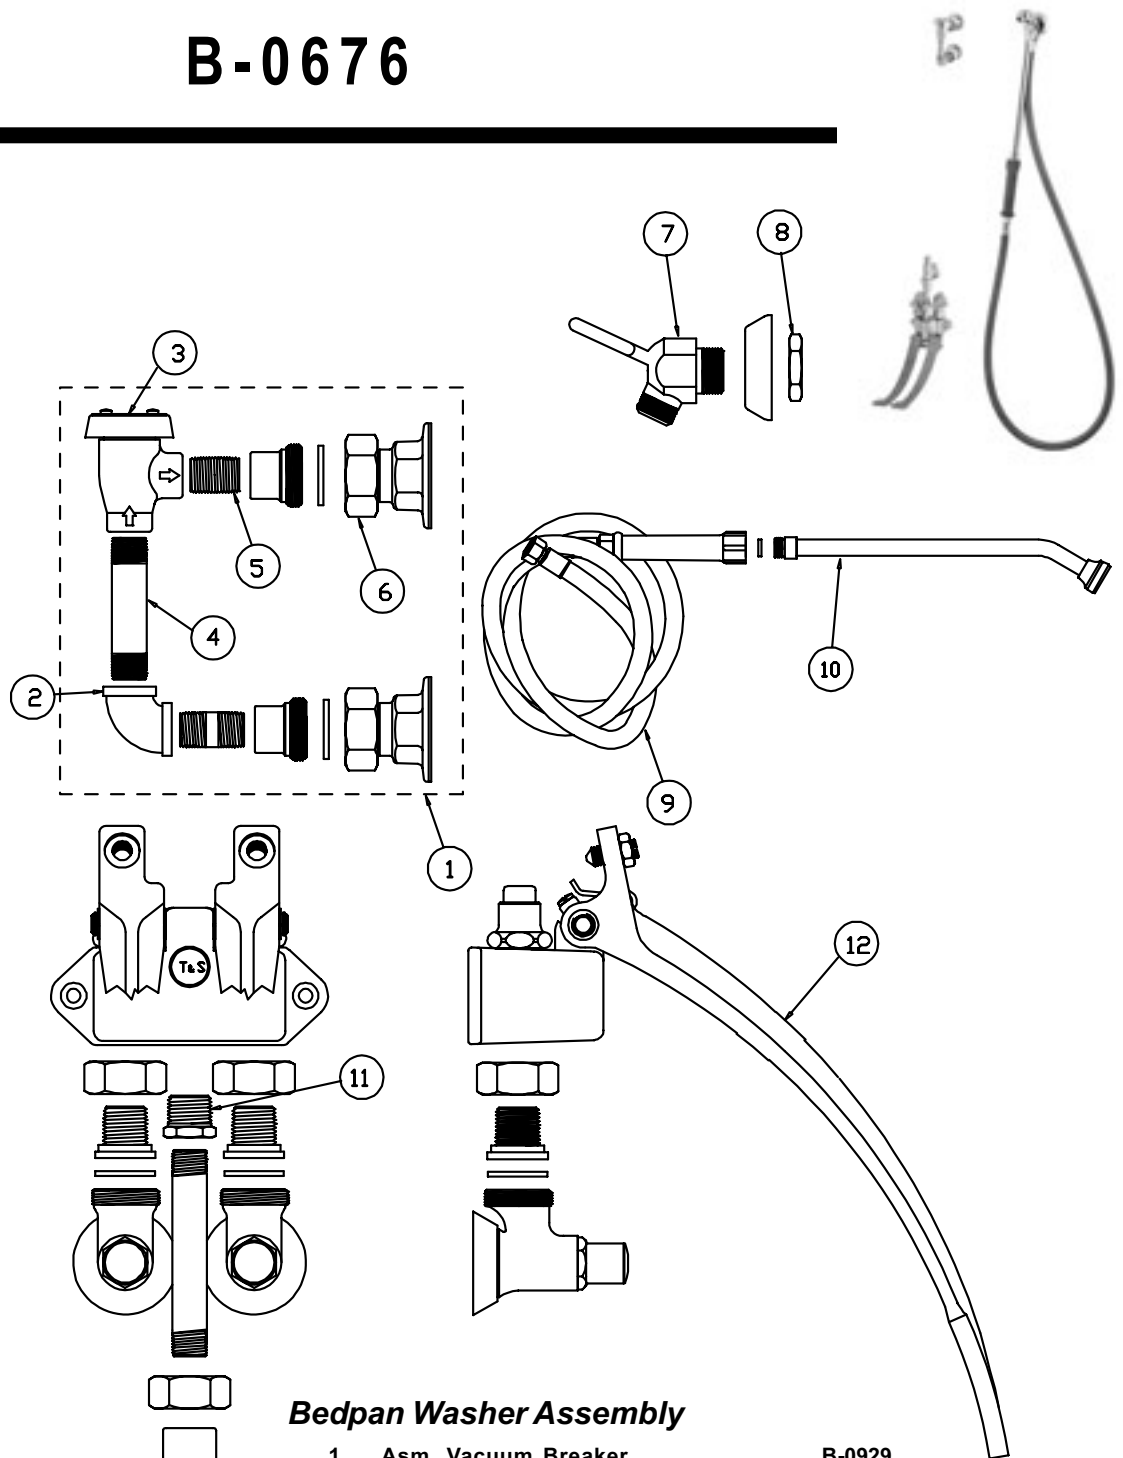


Bedpan Washer Assembly

1	Asm, Vacuum Breaker	B-0929
2	Elbow, Cast Round, 3/8"	001355-40
3	Vacuum Breaker	B-0968
4	Nipple	000355-40
5	Nipple	002535-25
6	Asm, Faucet Flange	009523-40
7	Outlet, Wall Hook	B-0104
8	Locknut	000713-20
9	Asm, Hose, Stainless Steel	B-0068-R
10	Asm, Spray Nozzle	002861-40
11	Hex Bushing, 1/2" Male x 3/8" Female	001359-40
12	Valve, Double Pedal	B-0504-01



B-0678, B-0679

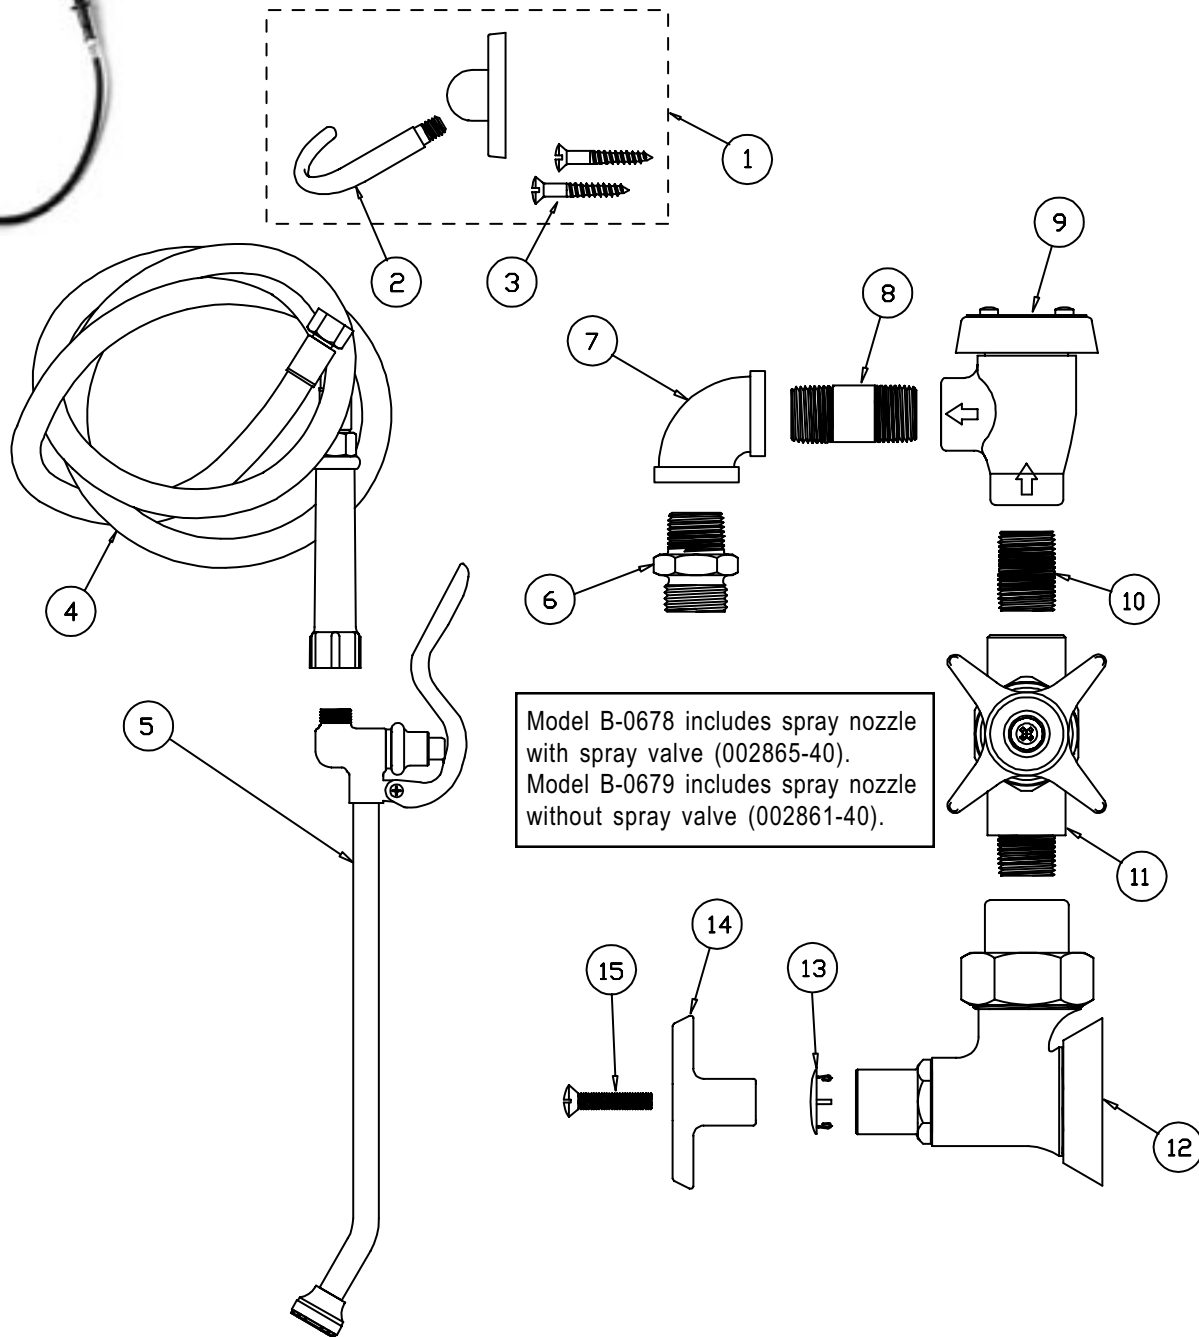


Bedpan Washer Assembly

1	Asm, Wall Hook	B-0104-D	8	Nipple	002341-40
2	Dummy Wall Hook	002309-40	9	Asm, Vacuum Breaker	B-0968
3	Screw, Wall Hook	000915-45	10	Nipple, Close 3/8" NPT	002535-25
4	Asm, Hose, Stainless Steel	B-0068-R	11	Asm, Straight Stop	007010-40
5	Asm, Spray Nozzle (B-0678)	002865-40	12	Stop, Loose Key, Angled	B-1351
	Asm, Spray Nozzle, Less Valve (B-0679)	002861-40	13	Cap, Key Stop	001605-45
6	Adapter, 3/4" Male X 3/4"-14 Male	000545-25	14	T' Handle for Supply Stops	001802-45
7	Elbow, Cast Round, 3/8"	001355-40	15	Screw, Loose Key Stop	002432-45



B-0690, B-0691

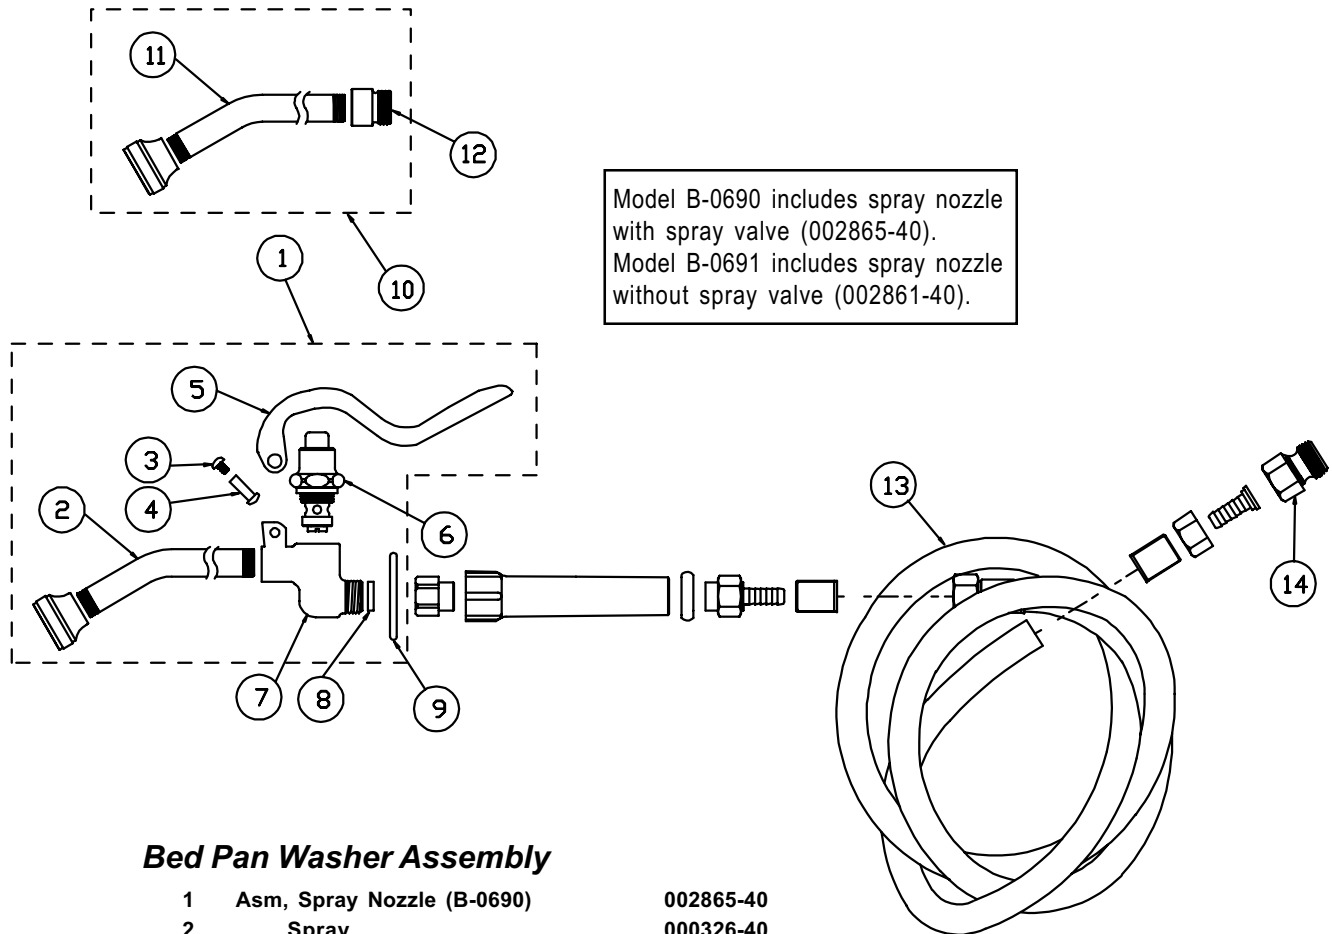


Model B-0690 includes spray nozzle with spray valve (002865-40).
 Model B-0691 includes spray nozzle without spray valve (002861-40).

Bed Pan Washer Assembly

1	Asm, Spray Nozzle (B-0690)	002865-40
2	Spray	000326-40
3	Screw, Handle	003199-45
4	Nut, Handle	003198-45
5	Handle, Squeeze Valve	001120-45
6	Asm, Bonnet	002856-40
7	Body, Squeeze Valve	000065-40
8	Washer	010476-45
9	Ring, Hold Down	000907-45
10	Asm, Spray Nozzle, Less Valve (B-0691)	002861-40
11	Spray	000326-40
12	Adapter, Goosneck End	000552-25
13	Asm, Hose, Stainless Steel	B-00068-R
14	Adapter, 1/2" Male x 3/4"-14 Male	000547-25



B-0692


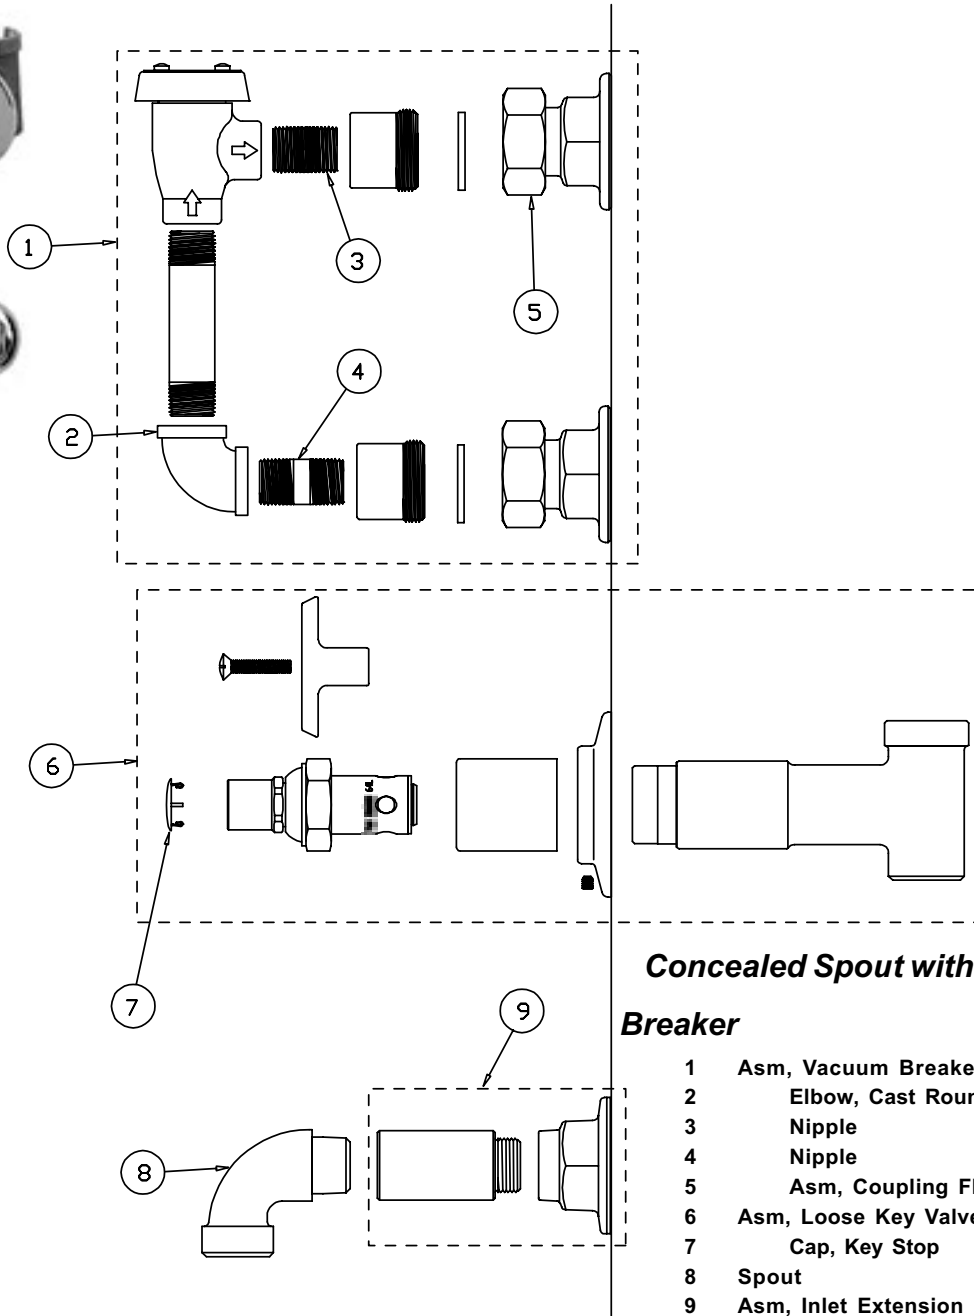


Concealed Spout with Vacuum Breaker

1	Asm, Vacuum Breaker	B-0929-A
2	Elbow, Cast Round	001357-40
3	Nipple	001509-40
4	Nipple	001357-40
5	Asm, Coupling Flange	002893-40
6	Asm, Loose Key Valve, Conceale	B-1027
7	Cap, Key Stop	001605-45
8	Spout	001618-40
9	Asm, Inlet Extension	B-0446




B-0700

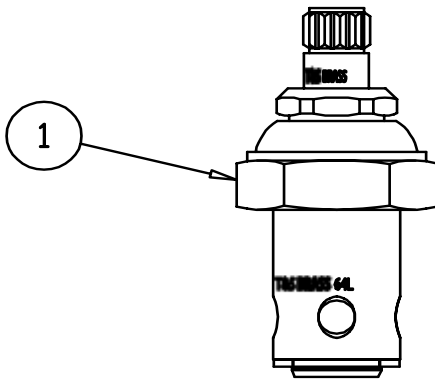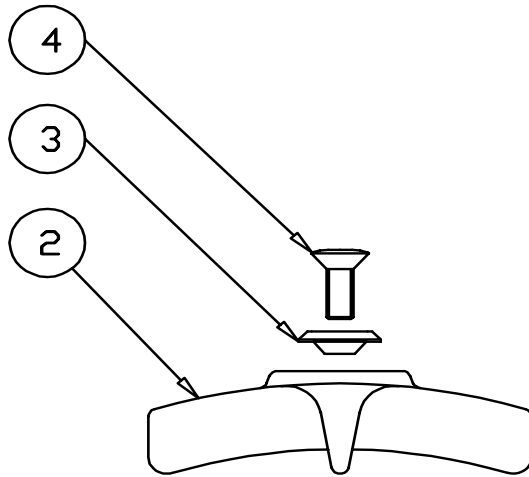


Faucet Assembly

1	Asm, Spindle Eterna - Hot	005960-40
2	Handle, Kitchen 4-Arm	002521-45
3	Index, Button, Blue/Cold	001660-45
4	Screw, Handle	000922-45

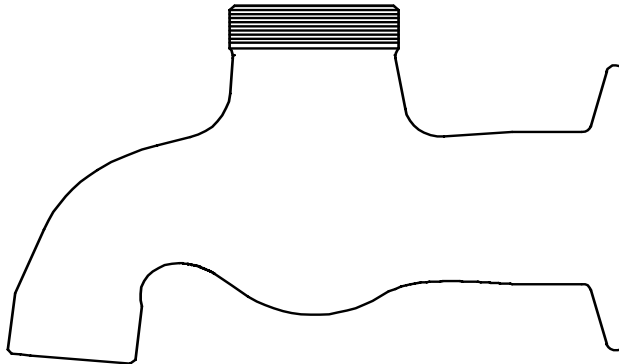

B-0702

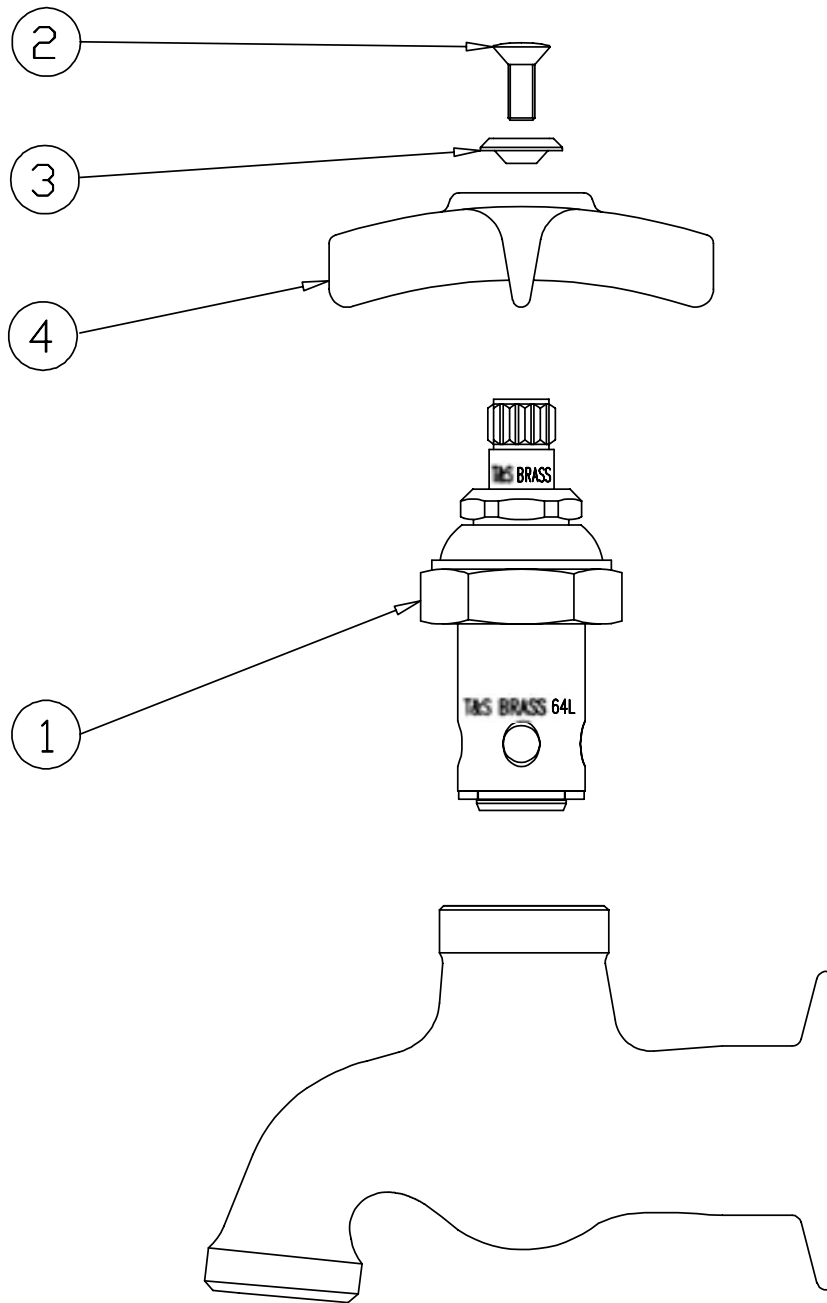


Faucet Assembly

1	Asm, Spindle Eterna	005960-40
2	Screw, Lever Handle	000922-45
3	Index, Button, Blue/Cold	001660-45
4	Handle, Lever	001638-45



B-0703

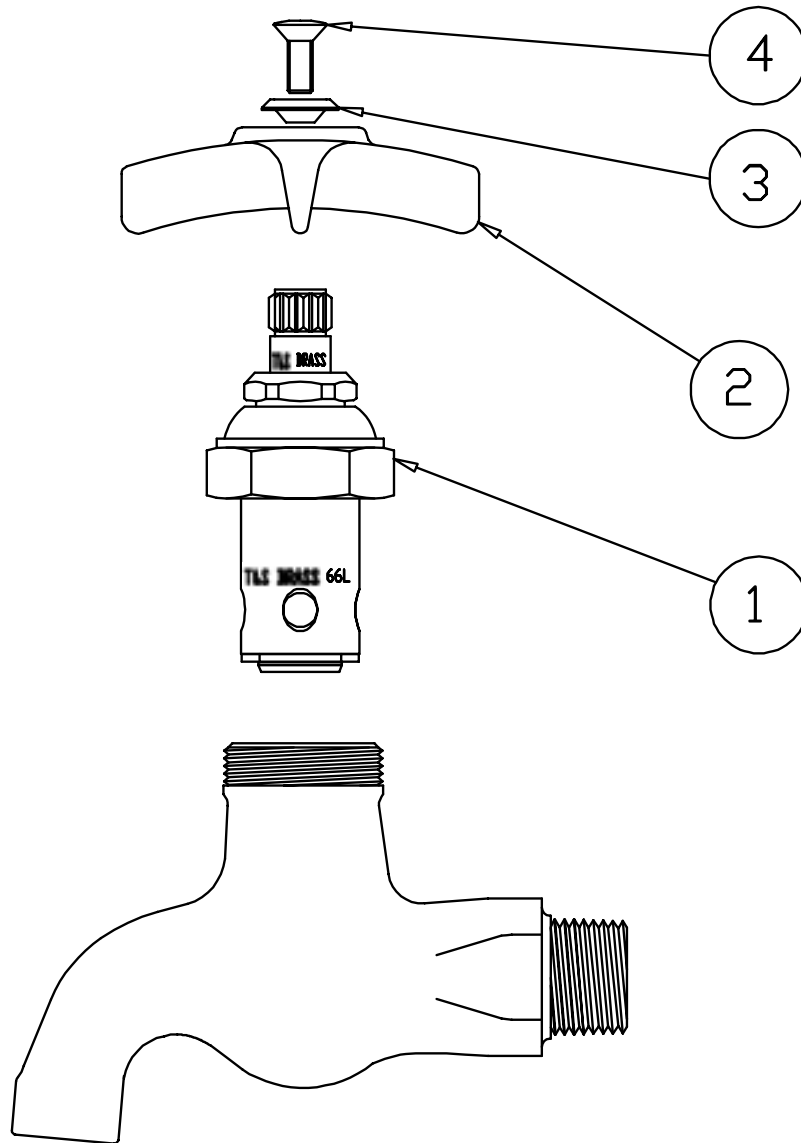


Faucet Assembly

1	Asm, Spindle Eterna - Hot	005960-40
2	Handle, Kitchen 4-Arm	002521-45
3	Index, Button, Blue/Cold	001660-45
4	Screw, Handle	000922-45



B-0704

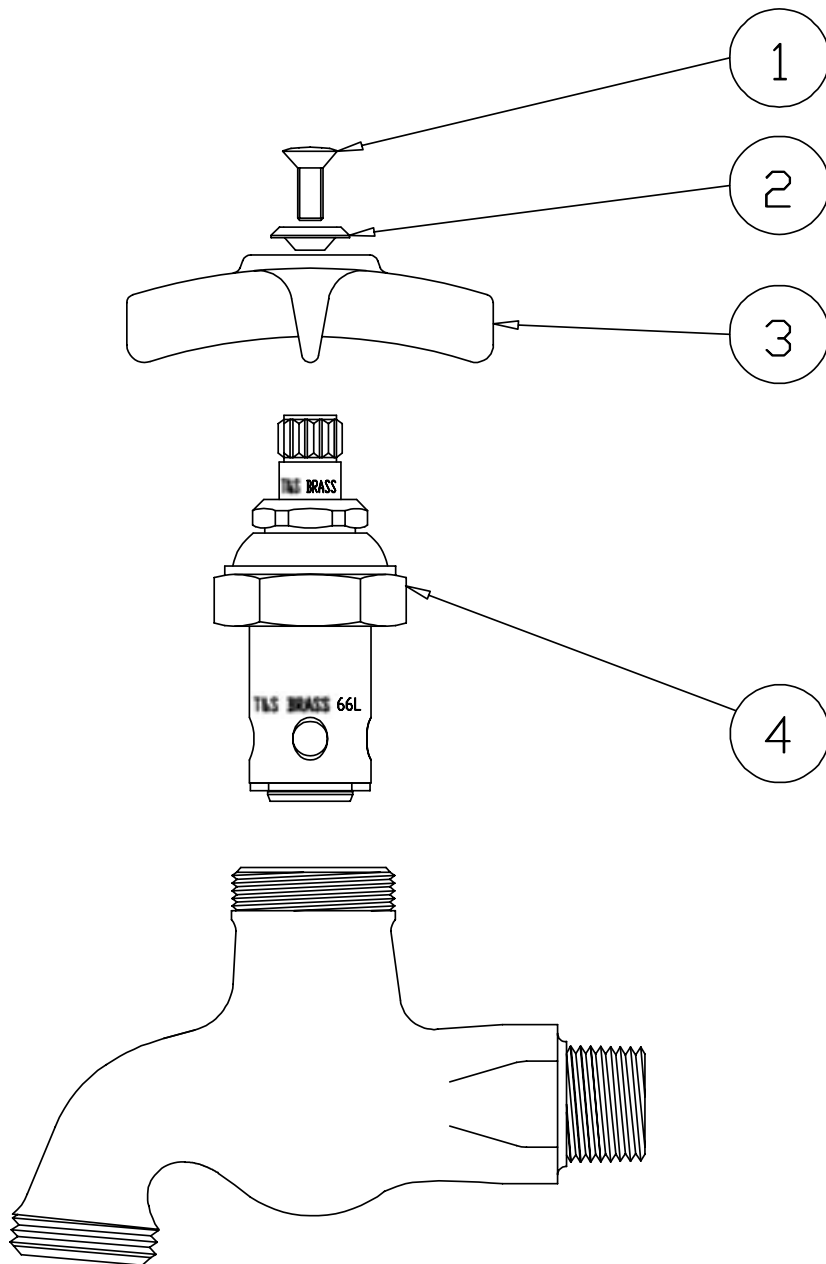


Faucet Assembly

1	Screw, Handle	000922-45
2	Index, Button, Blue/Cold	001660-45
3	Handle, Kitchen 4-Arm	002521-45
4	Asm, Spindle - Hot	005960-40




B-0706, B-0707, B-0708

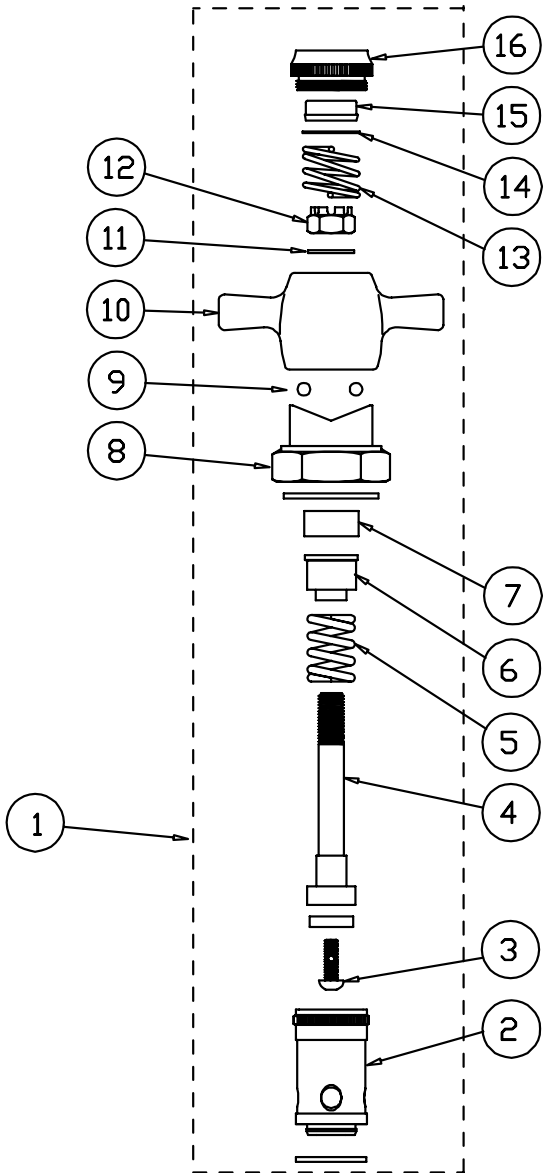


Faucet Assembly

1	Asm, Fast Closing (Blue/Cold)	007900-40
2	Insert, Eterna	000789-20
3	Screw, Seat	000933-45
4	Stem, Insert	000841-20
5	Spring, Bonnet	000901-45
6	Insert, Packaging	000740-20
7	Stem, Packaging	001101-45
8	Insert, Bonnet	006006-40
9	Ball Bearings	001408-45
10	Handle, 4-Arm, Bearings	000015-40
11	Washer, Handle	000100-45
12	Nut	000953-45
13	Spring, Handle	000902-45
14	Disc, handle	001013-45
15	Index, Snap-In, Blue	001686-45
16	Index, Ring, Handle	000674-40


All models shown include fast closing cartridge (007900-40). Only faucet body (not sold separately) differs between models.

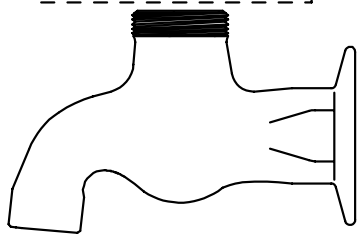

Model B-0706

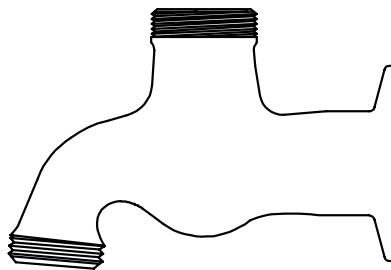

Model B-0707

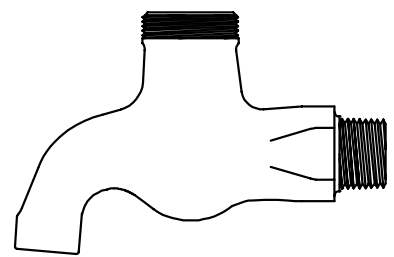


Model B-0708





B-0710

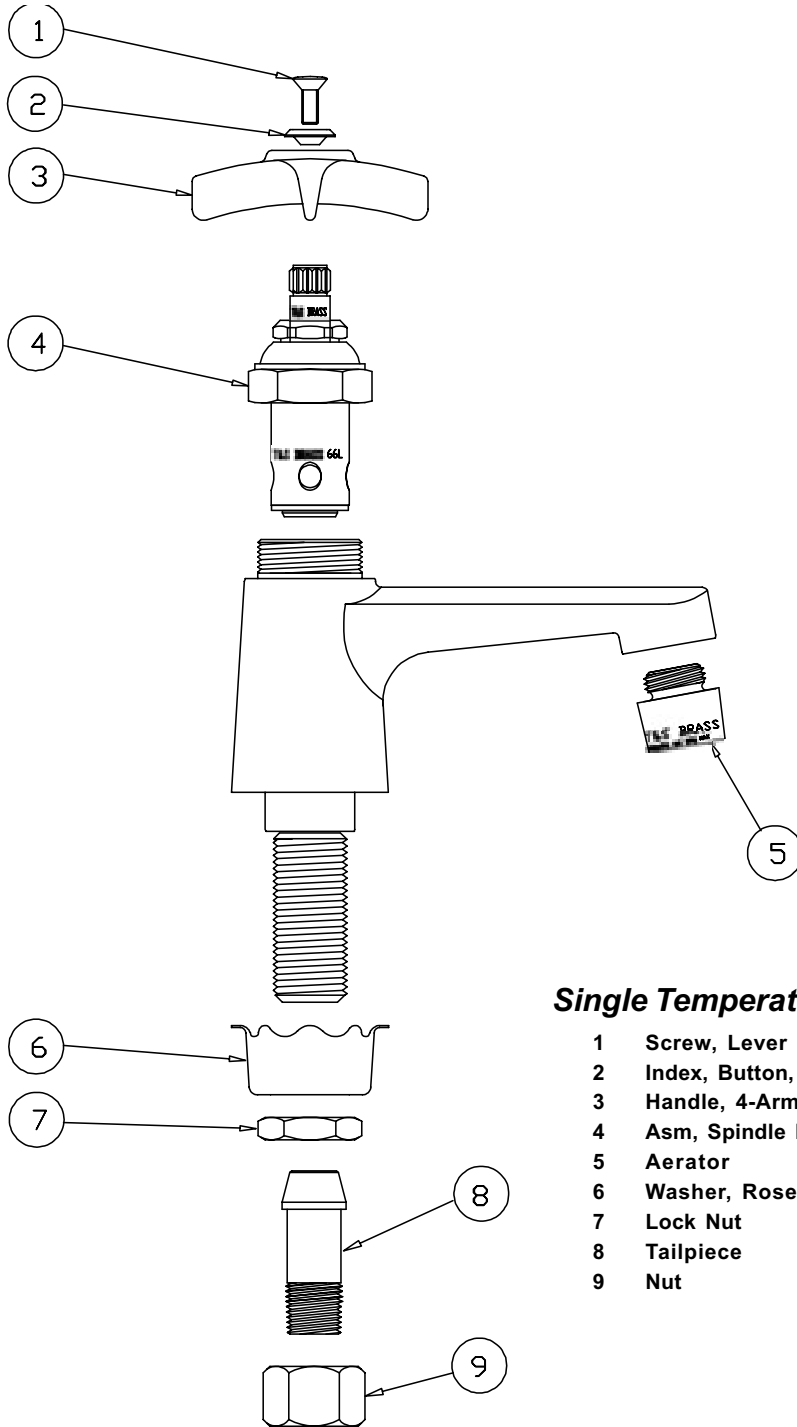


Single Temperature Basin Faucet

1	Screw, Lever Handle	000922-45
2	Index, Button, Blue/Cold	001660-45
3	Handle, 4-Arm	002521-45
4	Asm, Spindle Eterna - Hot	005960-40
5	Aerator	B-0199-02
6	Washer, Rosette	001000-45
7	Lock Nut	002954-45
8	Tailpiece	001592-20
9	Nut	000958-20



B-0711

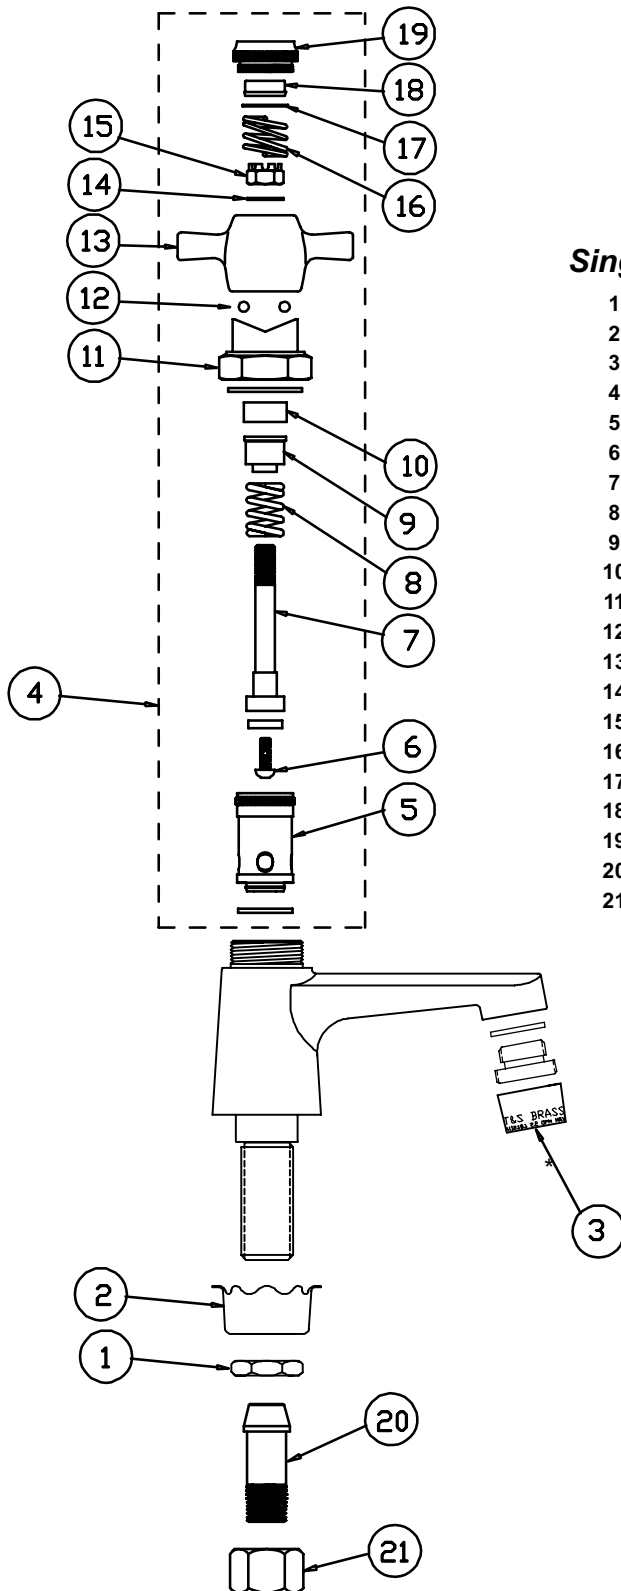


Single Supply Basin Faucet

1	Washer, Rosette	001000-45
2	Lock Nut	002954-45
3	Aerator	B-0199-02
4	Asm, Fast Closing (Blue/Cold)	007900-40
5	Insert, Eterna	000789-20
6	Screw, Seat	000933-45
7	Stem, Insert	000841-20
8	Spring, Bonnet	000901-45
9	Insert, Packaging	000740-20
10	Stem, Packaging	001101-45
11	Insert, Bonnet	006006-40
12	Ball Bearings	001408-45
13	Handle, 4-Arm, Bearings	000015-40
14	Washer, Handle	000100-45
15	Nut	000953-45
16	Spring, Handle	000902-45
17	Disc, handle	001013-45
18	Index, Snap-In, Blue	001686-45
19	Index, Ring, Handle	000674-40
20	Tailpiece	001592-20
21	Nut	000958-20



B-0712

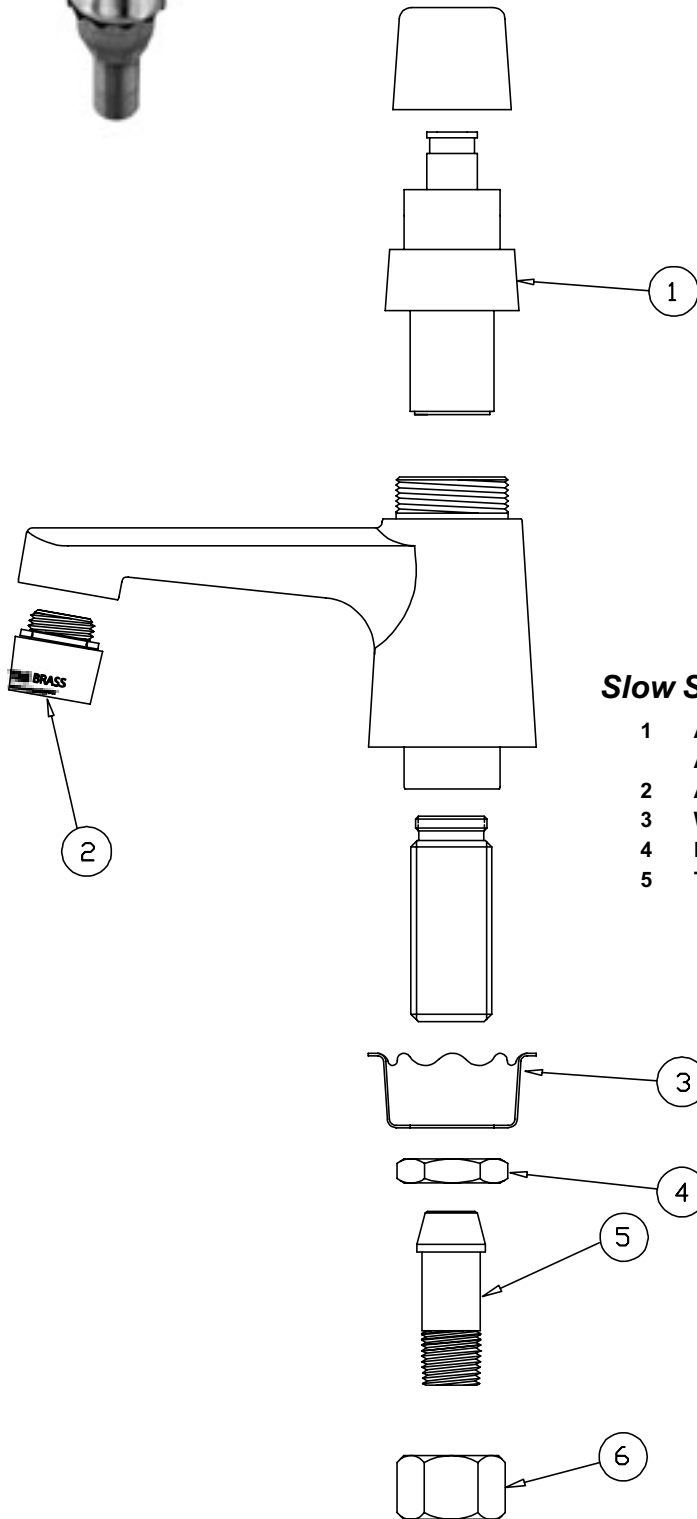


Slow Self-Closing Faucet Assembly

- | | |
|---|--|
| 1 | Asm, Slow Self Closing, Meter Valve - Ho 002874-40 |
| | Asm, Slow Self Closing, Meter Valve - Co 002875-40 |
| 2 | Aerator B-0199-02 |
| 3 | Washer, Rosette 001000-45 |
| 4 | Locknut 002954-45 |
| 5 | Tailpiece 001592-20 |




B-0712-01

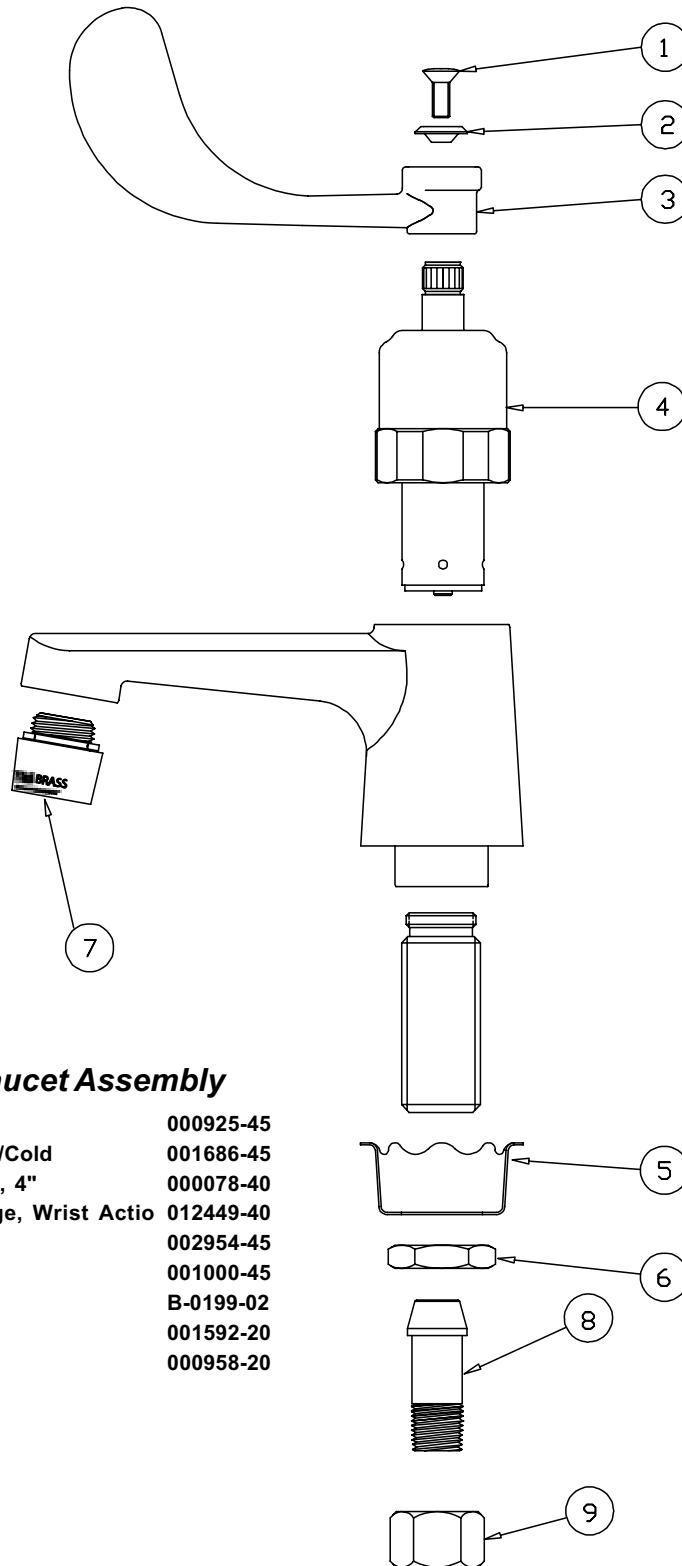

Slow Self-Closing Faucet Assembly

1	Screw, Handle	000925-45
2	Index, Snap-In, Blue/Cold	001686-45
3	Handle, Wrist Action, 4"	000078-40
4	Asm, Meter Cartridge, Wrist Actio	012449-40
5	Locknut	002954-45
6	Washer, Rosette	001000-45
7	Aerator	B-0199-02
8	Tailpiece	001592-20
9	Nut	000958-20

B-0713

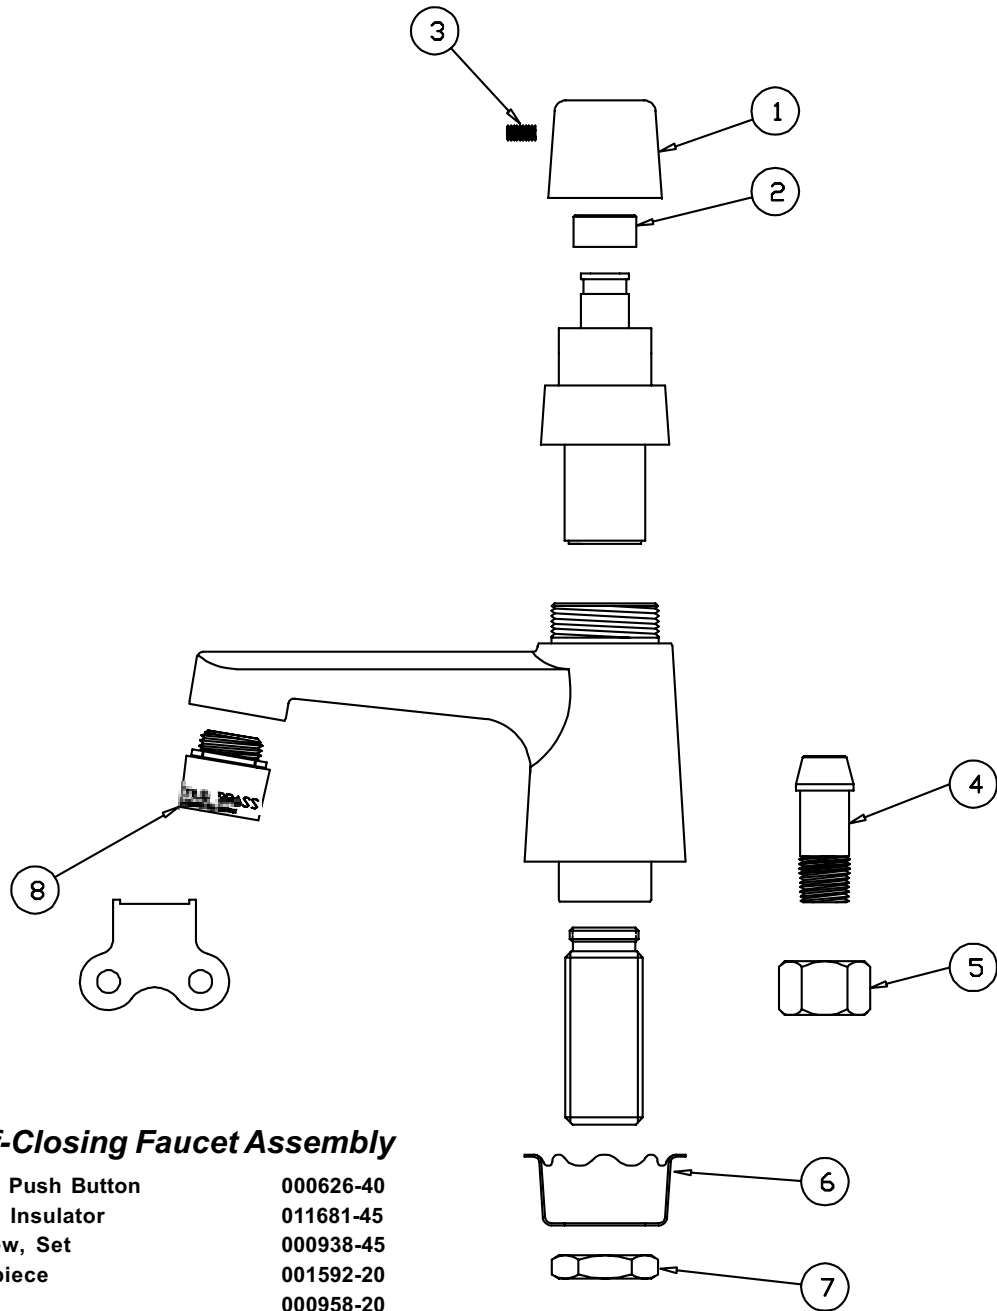


Slow Self-Closing Faucet Assembly

1	Cap, Push Button	000626-40
2	Cap, Insulator	011681-45
3	Screw, Set	000938-45
4	Tailpiece	001592-20
5	Nut	000958-20
6	Washer, Rosette	001000-45
7	Locknut	002954-45
8	Aerator	B-0199-07



B-0715



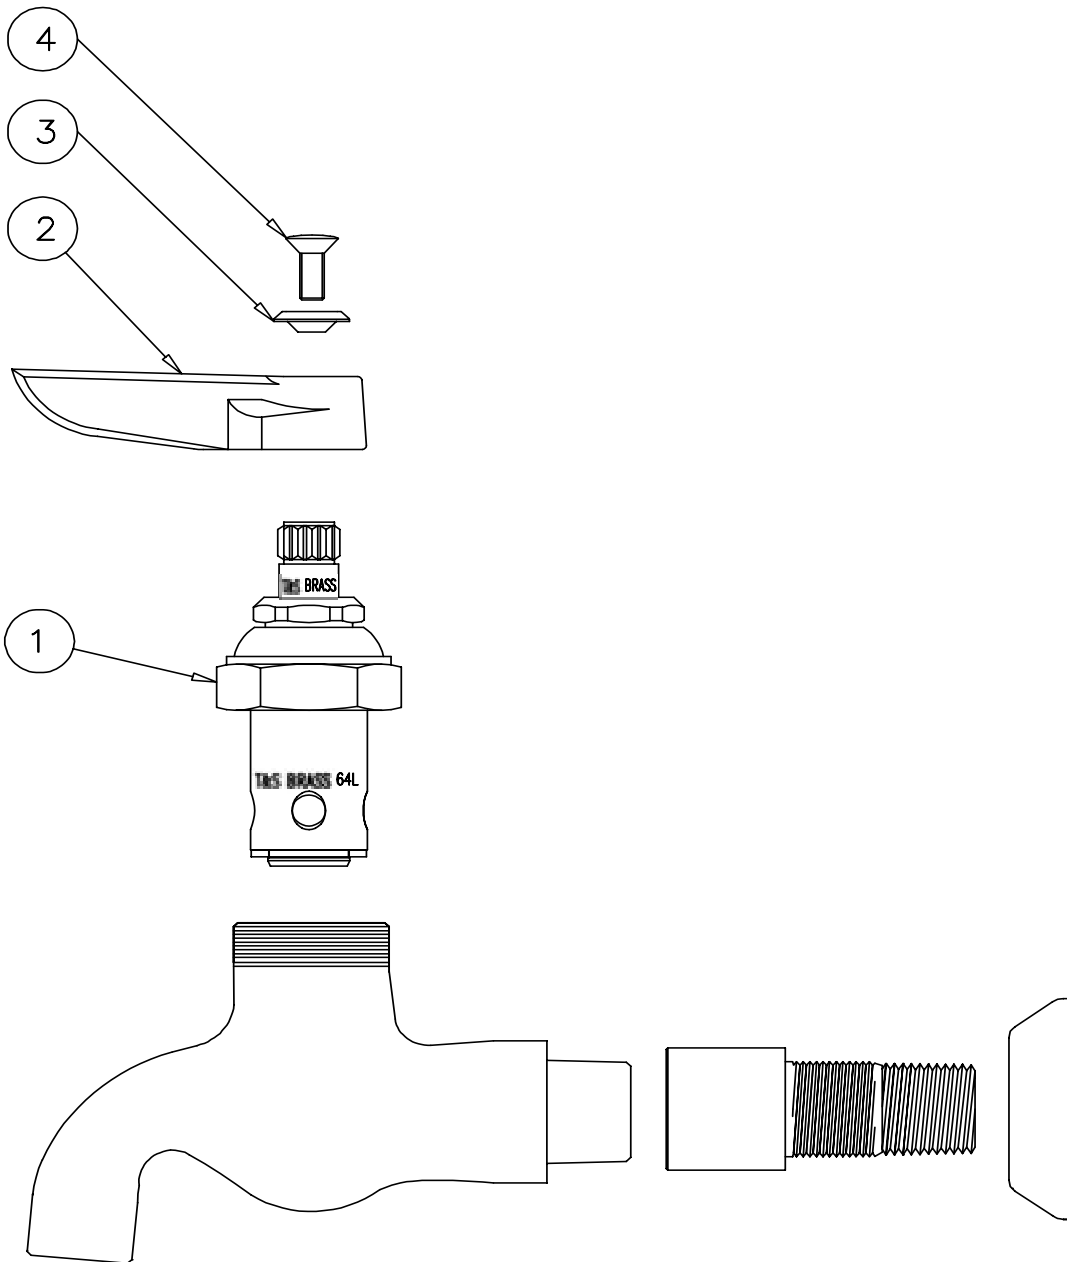


Faucet Assembly

1	Asm, Spindle Eterna - Hot	005960-40
2	Handle, Lever	001638-45
3	Index, Button, Blue/Cold	001660-45
4	Screw, Handle	000922-45



B-0717

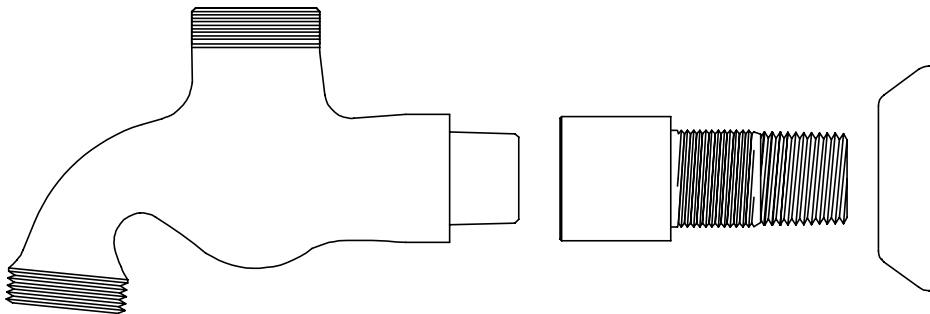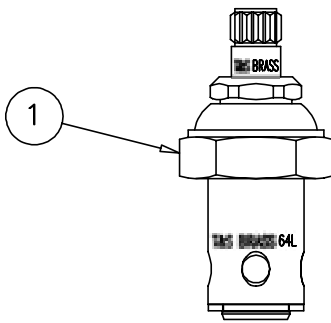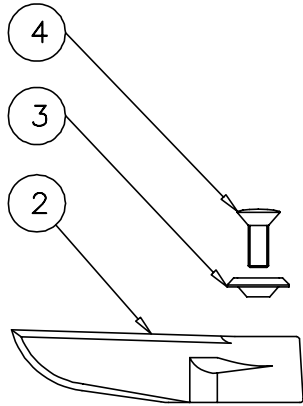

Faucet Assembly

1	Asm, Spindle Eterna - Hot	005960-40
2	Handle, Lever	001638-45
3	Index, Button, Blue/Cold	001660-45
4	Screw, Handle	000922-45

