


B-0805-VR

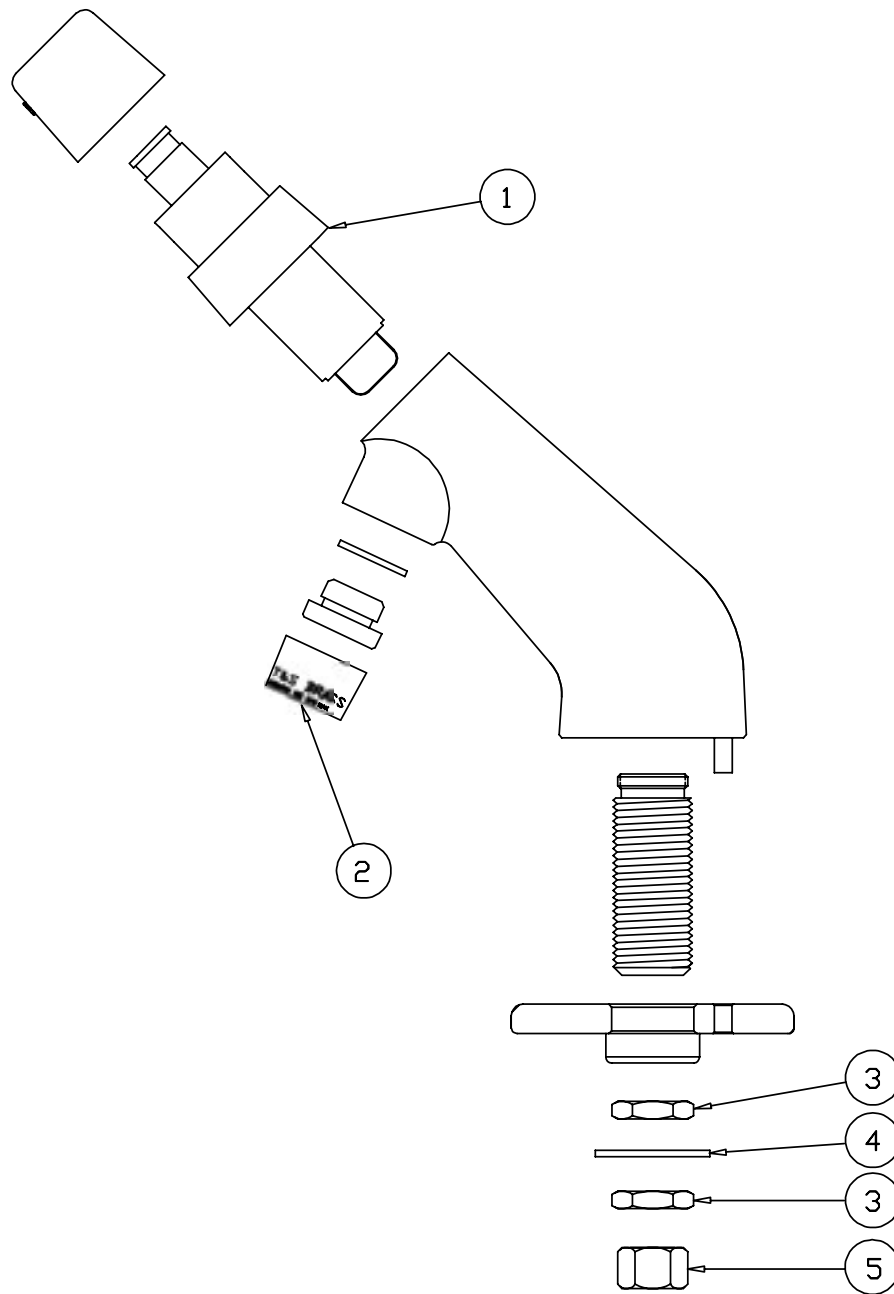

Faucet Assembly

- | | | |
|---|---------------------------------------|-----------|
| 1 | Asm, Self-Closing, Meter Valve, Blank | 002874-40 |
| 2 | Aerator | B-0199-02 |
| 3 | Locknut | 002954-45 |
| 4 | Washer | 000999-45 |
| 5 | Nut, Coupling | 000958-20 |

