


# BONNET ASSEMBLIES

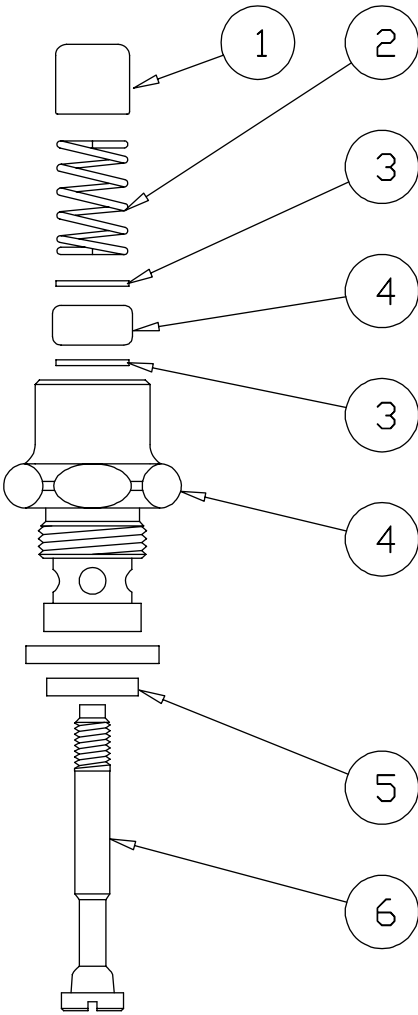

**Bonnet Assembly - 002856-40**

- |   |               |           |
|---|---------------|-----------|
| 1 | Button, Push  | 000753-25 |
| 2 | Spring        | 000895-45 |
| 3 | Washer        | 000974-45 |
| 4 | Stem, Packing | 001100-45 |
| 5 | Bonnet        | 000608-25 |
| 6 | Washer, Seat  | 012915-45 |

**Bonnet Assembly - 163A**

- |   |                         |           |
|---|-------------------------|-----------|
| 1 | Asm, Spindle and Insert | 002586-25 |
| 2 | O-Ring, Insert          | 001062-45 |
| 3 | O-Ring, Spindle         | 001063-45 |
| 4 | Screw, Washer, Seat     | 000933-45 |

