
B-0675 and B-0676
Bedpan Washers

B-0675 (right)
Bedpan Washer with Foot Valve Control, Integral Loose Key Stops, Vacuum Breaker Assembly, Wall Hook Hose Outlet, Spray Valve with Extended Nozzle and Reinforced PVC Rubber Hose

B-0676
Same as B-0675 except Extended Nozzle directly attached to Hose (no Self-Closing Valve)

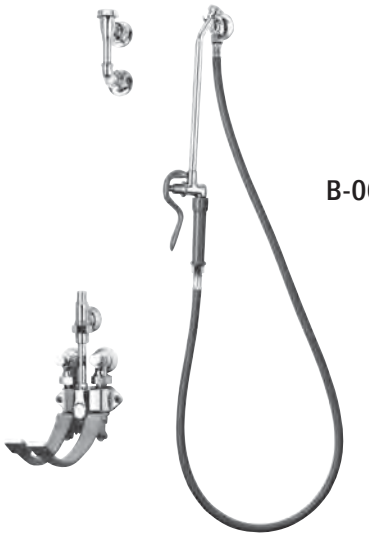

ITEM NO.	SALES NO.	DESCRIPTION
1	002865-40	Bed Pan Spray Valve w/ Nozzle Assembly (B-0675)
	002861-40	Bed Pan Spray Nozzle Asm. (B-0676)
2	010476-45	#27 Washer
3	000907-45	Spray Valve Hold Down Ring (B-0675)
4	B-1350	Loose Key 1/2" NPT Angle Stop Asm. w/ Tee Handle & Screw
5	001019-45	Coupling Nut Washer
6	000763-20	Seat
7	166A	Service Stop Spindle Asm. w/ Tee Handle & Screw
8	B-0068-R	68" Reinforced PVC Hose Asm.
9	B-0929	Atmospheric Vacuum Breaker
10	B-0968	3/8" NPT Vacuum Breaker
11	B-0104	3/4-14 UN Male Outlet Wall Hook
12	B-0504-01	Wall Mount Double Pedal Valve Asm. w/ Angle Stops
13	B-1355	Loose Key 3/8" NPT Angle Stop Assembly w/ Tee Handle & Screw
14	010092-40	Nipple, 3/8" NPT x 4-1/4" Lng
15	001605-45	Cap
16	B-0504	Wall Mount Double Pedal Valve Assembly
17	002432-45	Screw, Tee Handle
18	001802-45	Handle, Supply Stop "T"

